


MAN-A-FRE

FJ Cruiser Rock Sliders Installation Tips:

Part numbers: FJRS, FJRS-WIDE, FJRS-SILVER, FJRS-WIDES

1. Clean frame and threaded mounting holes with soap and water to remove any mud or residue.
2. Locate driver and passenger side sliders and lay next to vehicle on blanket or soft surface to not scratch sliders.
3. Hold slider up to frame rail and line up smaller holes to existing threaded holes on frame. Prop slider up with jackstands or something with adequate support.
4. Use supplied hardware to mount slider to frame. Only thread bolt in finger tight. After all bolts are installed, tighten down completely in a rotating sequence.

Install hardware in this order:

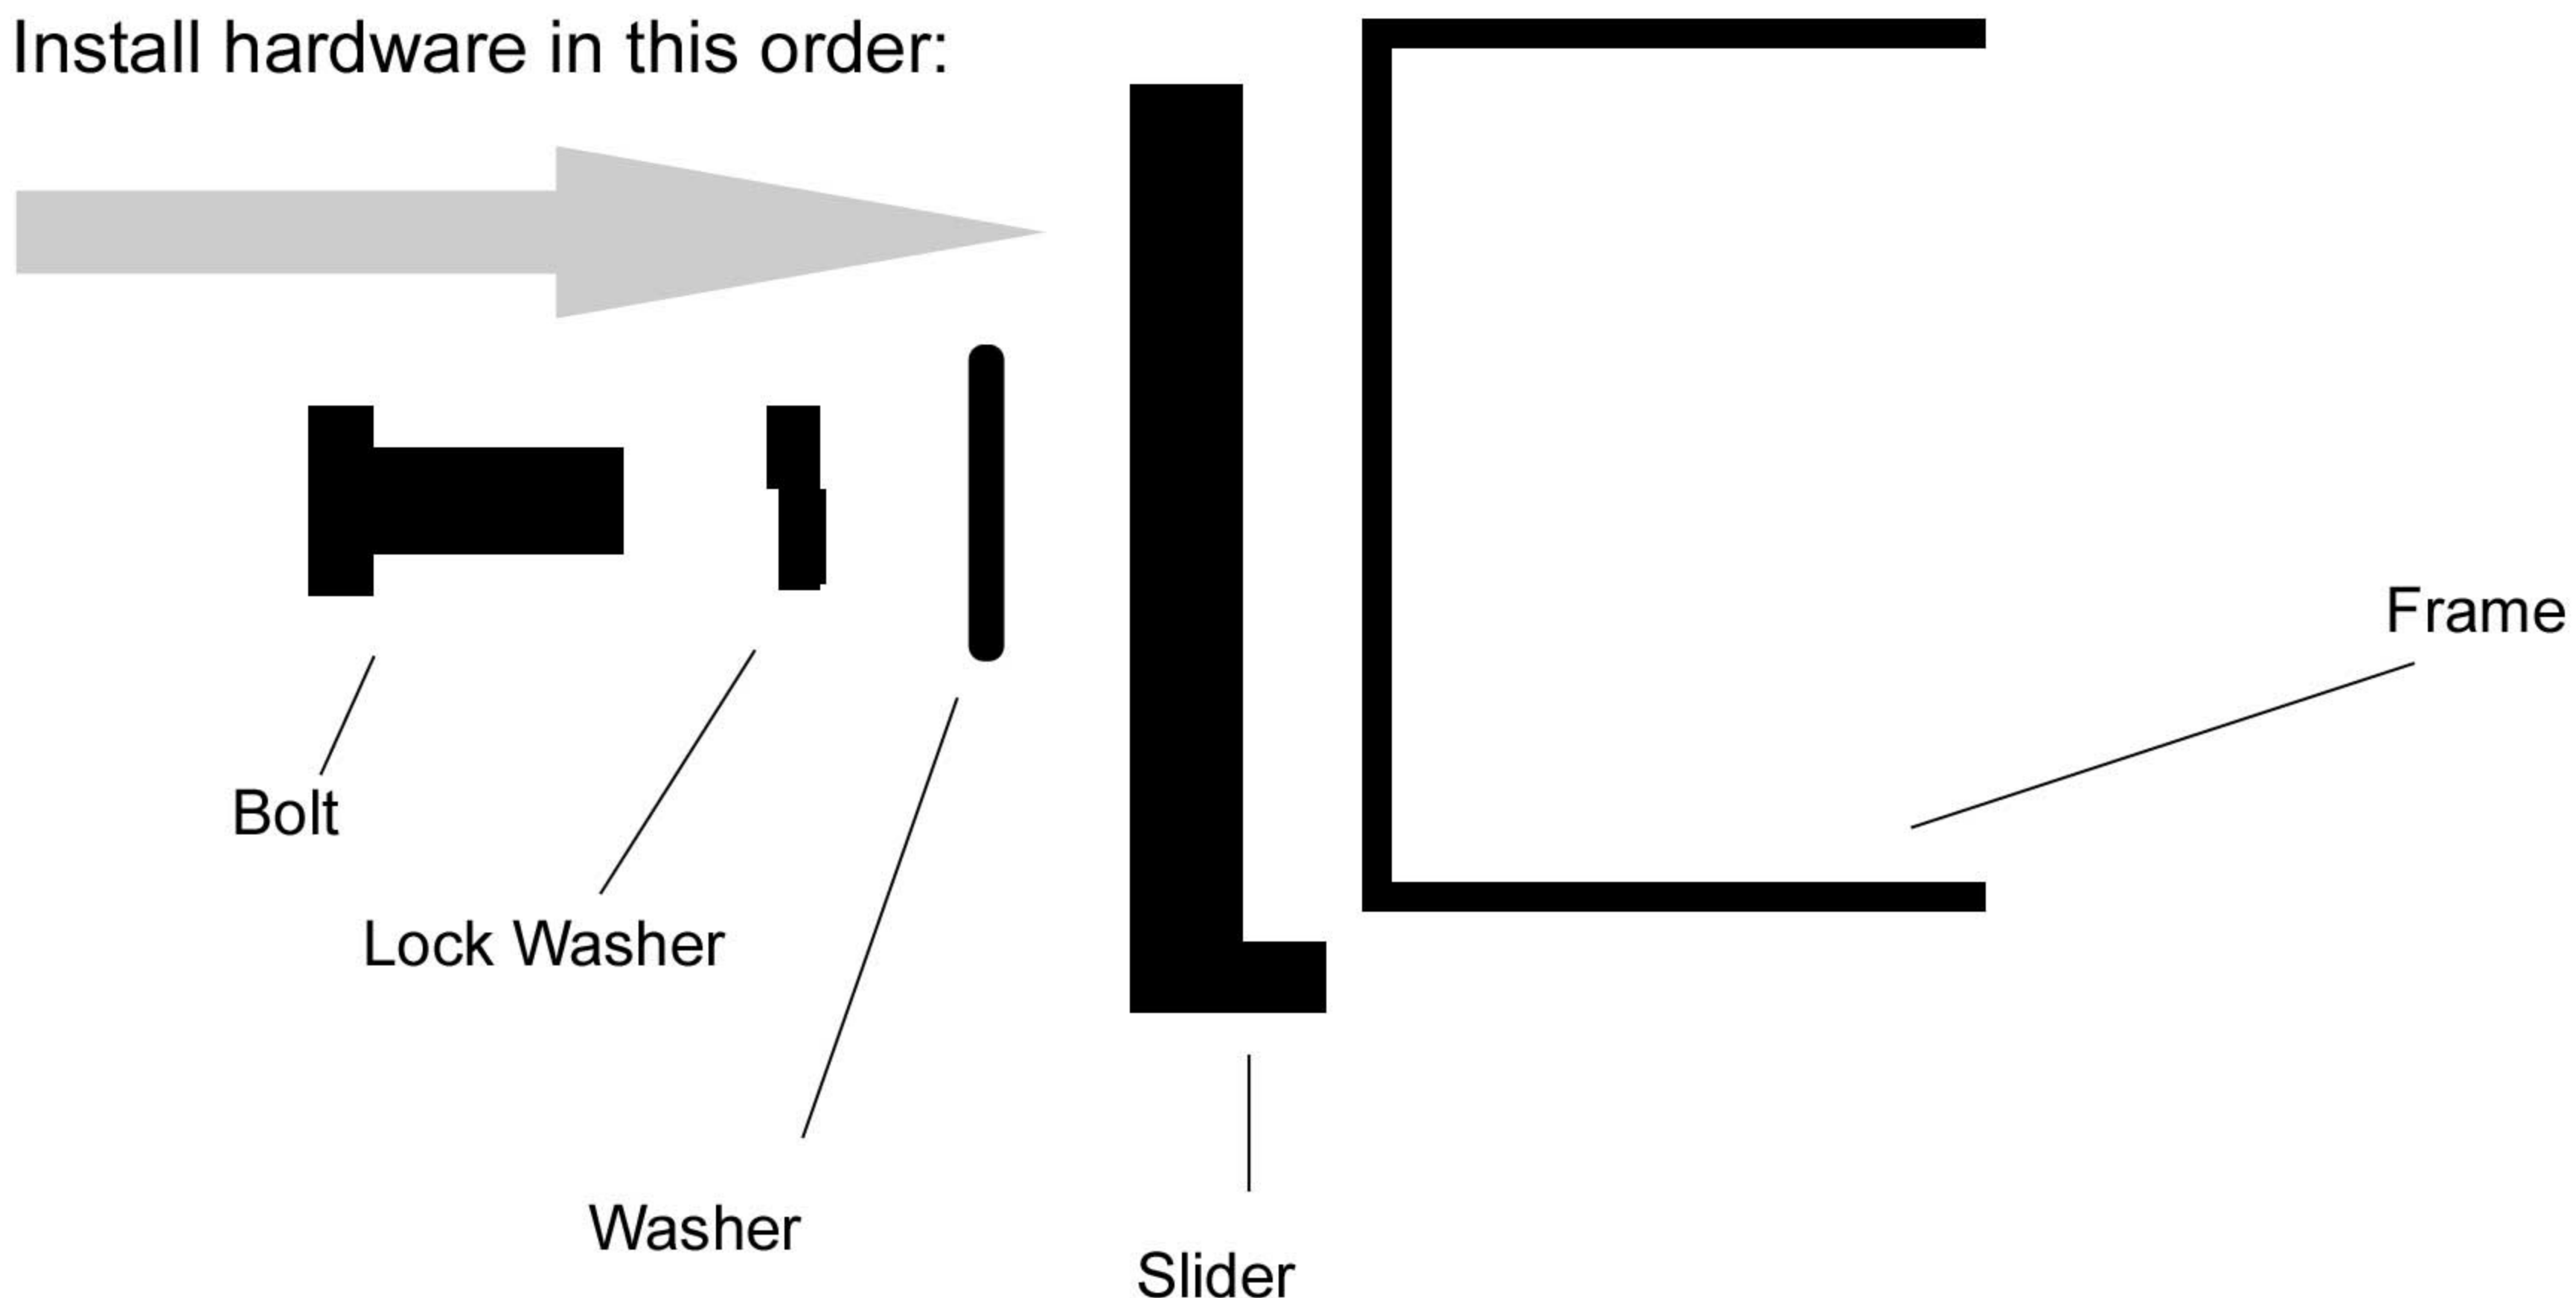

Note: Larger holes have been pre-drilled in your new rock sliders for additional strength. After you install your sliders, you may drill through the frame and install larger (not supplied) hardware. This is 100% optional and not needed for minor off-road use.

Man-A-Fre Inc.
1775 N. Surveyor Ave.
Simi Valley, CA 93063
Tech helpline: 805-578-8712
www.Man-A-Fre.com